

Gladiator RG300 - User guide

Important notice!

Read this information carefully so you can use the telephone in the right and safe way:

- the mobile telephone **EVOLVE Gladiator RG300** gained the certification IP68, i.e. it is, with the exactly define conditions (norm IEC 60529, temperature from 15°C to 35°C, pressure 86-106 kPa, 1 m water column during 30 minutes) water and dust resistant. However neither this norm guarantees the absolute water-resistance of the device
- therefore keep the earphone socket, SIM slot and microUSB port clean and carefully sealed up to maintain the water-resistance and “dust-resistance”
- in view of the fact that there are many different ways of using, like e.g. if the USB cable is or isn't connected, we aren't responsible for any damage caused by the liquid
- do not use the phone outside during the storm; we aren't responsible for any potential damage of the device or the health related with this way of using
- do not dip the phone groundlessly into the water and do not needlessly submit it to very low or too high temperatures

- protect the phone from the moisture and the steam. If the moisture gets into it, it can cause its overheating, short circuit or the damage of the whole device
- if the phone falls into the water, do not press the buttons of the keypad and immediately open it with the dry cloth
- this phone is a complicated electronic device; therefore protect it from the shocks and the influence of the magnetic field
- do not pierce the loudspeaker, do not put any things into the holes, do not paint the phone with the dye - all these activities influence the functionality and the tightness of the phone
- if the phone is after the service intervention, its resistance against the dust and water can be lowered
- the description of using the cell phone and user's interface can vary from this manual due to the firmware version of your device and specific conditions of the mobile operator
- repairing and the service are possible to accomplish only in the authorized service place for the phones EVOLVE (for more visit www.evolve-europe.com), otherwise you can damage your phone and it is not under warranty anymore

Important commercial law statement

- no part of this manual can be copied, extended

or changed without prior written agreement of the producer.

- the producer/distributor reserves the right to make changes in this product against the state written in this manual without prior warning, because the product goes through the continual progress and improving.
- the producer, distributors nor sellers are not responsible for any lose of data or direct or indirect damage caused in connection with the phone operation, no matter how they occurred.
- the content of this manual is provided without the guarantee. The producer doesn't provide any guarantee of accuracy or reliability of this manual's content. The exceptions can be made by the local law.
- the producer reserves the right to change or completely withdraw this manual without prior warning.


Notice for the charger!

At the first switch on, charge the battery for 12 hours at least. You will get its maximal capacity and provide the maximal life time of battery.

Important notice!

Always make sure that you have tightly closed all the rubber covers in the phone (USB a SIM card).

Inserting the SIM card

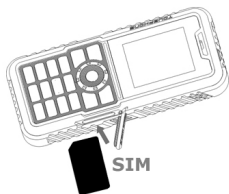

Be careful at handling, insertion or taking the SIM card out. Before the installation or taking the SIM card out always make sure that the phone is switched off. Put the card according to the picture (contacts are downwards). Press the SIM slot rubber cover tightly, for the right tightness.

















For connecting the charger or PC use the USB connector.

Battery

It is the special high capacity battery, and its incorrect replacement can cause non-repairable damage of the phone. At the correct using of the

phone, the battery will serve you very long. If the service intervention is necessary, contact the authorized service place for the EVOLVE phones.

Icons on display

	Indication of actual signal strength
	Indication of unread SMS
	Indication of all calls unconditional forwarding
	Indication of missed calls
	Actual ringing type
	Actual ringing type: vibration/silent mode
	Actual ringing type: ringing and vibration
	Actual ringing type: vibration, then ringing
	Actual ringing type: silent mode
	Indication of keypad lock
	Indication of earphones connection
	Indication of active Bluetooth
	Indication of (pre)set alarm
	Indication of battery charging

Design and functions



	Description	Notice
1	Left functional key	Makes action described in the left down part of the display
2	Right functional key	Makes action described in the right down part of the display
3	Enter key	For making the phone call of re-dialling the last phone call
4	End key	For ending the phone call or switching the phone on or off
5	OK key	Confirming the choice

6	Navigation keys	In stand-by mode, the fast access to some operations
7	Numeric keypad	Entering the numbers
8	Loudspeaker	
9	Light	
10	USB port	
	Earphones input	
11	Microphone	
12	Reset	Switches off the battery recharging
13	The light key	
14	Loudspeaker	

Dialling and answering the phone call


For right displaying of the caller, it is necessary to have the phone numbers on the phone list saved in the international format (+420)

Making the internal phone call


In the stand-by mode (of the phone), you can enter the numbers making the nine-digit telephone number of the called person and for dialling the call press the key with the green telephone.

Making the international call

In the stand-by mode (of the phone), put the

symbol “+” (double click of the key ) and then the country code that you need. After that you can start entering the numbers making the telephone number of the called person and for dialling the call press the key with the green telephone.

Dialling the numbers from the phone list

In the phone list search for the contact of the corresponding person and his or hers number and for dialling the call press the key with the green telephone. Rejection of the incoming call 

Speed dials

Open Telephone list → Options → Settings → Speed dials. In the stand-by mode of the phone, press for a longer time the corresponding numeric key, that includes your required speed dial number. It will make its automatic dialling.

Ringing volume

During the phone call you can set the ringing volume by pressing the navigation keys up and down.

Hands Free

By pressing the right multifunctional key, you call local menu with the option “Hands free” and then you can divert the call from the earphones to the loudspeaker (of the phone).

Telephone menu

Telephone list - displaying all the contacts saved in the telephone list. You can use the speed dials.

Messages - enables read, write, send and receive the messages from short message service (SMS) or the multimedia message service (MMS). For SMS messages you can set up the mode, check the memory status, preferred storage, and so on. Check, if your SIM card supports the MMS or contact your operator with this question. For setting the MMS profile, contact your operator.

Call centre

- list of calls, list of missed calls, dialled numbers, received calls, call duration, and so on
- settings

Settings

Profiles - thanks to this menu you can uživatelsky adjust various ringing tones for incoming calls. Choose the item Profiles and for the other possibilities press the left key

Phone settings

- **Time and date:** Set up the town, time, date and format of showing these data.
- **Planned switching on/off**

- **Language:** Choice from the available languages for the phone menu.
- **Preferred method of inserting:** There is a selection of many types for inserting the text methods. It is possible to preset one of the methods of inserting as default for write or arrangement of the texts.
- **Display settings:** Setting up the phone display wallpaper, display screensaver, date and time format.
- **Shortcuts:** Individual function adjustment assigned to the navigation centre key.
- **Flight mode:** For safety during the air traffic, you can switch between the flight mode and normal mode.
- **Other settings:** In this menu you can adjust the intensity of the LCD display underlight and the length of its lighting.

Network setting

Network selection: Searching for the available network due to the preset mode of network searching or manual selection of the required network from the list.

Preset: Setting preset network searching.

Security setting

- **SIM card lock:** This function protects your SIM card against the unauthorised using by other persons. If the PIN code of the SIM card lock is

activated, it must be entered at every switching on, otherwise only the SOS call would be possible to be made.

- **Notice:** PIN code is used as the password to get SIM card to work. If the PIN code is entered incorrectly three times in succession, the SIM card gets locked. In this case you need so called PUK code to unlock the SIM card. You get the PUK code together with the PIN code when buying the SIM card. If you haven't got it, contact your phone operator.

- **Phone key:** This function protects your phone against the unauthorised using by others (the factory password is „0000“).

- **Automatic keypad key:** After activating this function, the phone keypad automatically locks itself after elapsing the preset time, if the phone isn't in use.

Organizer

- **Files maintenance** - in the phone or in the inner flash memory

- **Games**

- **Service** - WAP

- **Calculator:** you can use the basic arithmetic operations as addition, subtraction, multiplication and division. You can enter the numbers directly by pressing the numeric phone keys

- **Calendar**

- **Alarm clock:** activate the editing options, you

can set up to five different alarms, turn on/off, set the time, details as the type of reminder, tone, and so on.

- **Bluetooth - Switching on:**

activating/deactivating Bluetooth function. If the Bluetooth is switched off, all the Bluetooth connections are ended and you cannot send and receive data through the Bluetooth connection

- **My device:** shows of the parameters of your device

- **Active devices:** the list of the devices that are actually paired

Multimedia

Photo camera - left functional key - the setting options. For saving the photo use the centre key.

- **Camera settings:** it is used for setting the diaphragm sound, exposure value, contrast, stabilizer, self-timer and continuous recording.

- **Picture settings:** it is used for setting the picture definition (128x160/160x120/320x240) and quality.

- **White balance:** setting the white balance

- **Display mode:** choose the automatic or night photography.

- **Effect settings:** you have a wide menu of the effects, as for example Normal, Greyscale, Sepia.

- **Storage:** you can save the photos to the phone memory or to the inner memory.

- **Default settings:** restores the camera parameters default factory settings.

Picture view - choose the photo and then in menu “Options” choose next operation

Video recorder - press OK → then press the centre key to start video recording. By pressing the “Options”, you can set the parameters of video camera, video parameters, effects, the storage and default factory settings

Video player - choose the required video and in menu “Options” choose Play, Send, Rename, Delete, and so on

Audio player

- Sound recorder - press “Options” → “Recording” → „Pause“ and „Stop“

FM radio

Before using FM radio, first of all connect the earphones, which serve as the aerial, to the phone.

-**List of radio stations:** set the station name and the frequency and choose „Save“.

- **Manual tuning:** you can select the station frequency that you want to listen to, manually in the scale from 87.5 to 108.0 MHz; enter the numbers by phone keys, including the decimal point. You can enter this by pressing the key #.

- **Automatic tuning:** the phone automatically searches for and saves to the list all of the actually available FM stations.
- **Settings:** in this part you can switch on/off radio playing on the background or by the loudspeaker, the format of broadcast recording, the sound quality and the storage for recording.
- **Recording:** starts recording actual FM station.
- **Connection:** choose the file and continue in recording.
- **File list:** the list of all recorded files.

Problems solving

If you have a problem during using the phone, check the solution options according to the following table. If you can't find the solution, contact the sales assistant or the service. Don't try to dismantle and repair the phone, you can lose the guarantee.

EVOLVE - SERVICE WITHOUT WORRIES

Service without worries saves your time and money.

The warranty claims are thanks to the straight contact to the service dealt faster and the customer doesn't have to travel anywhere. The list of service places for using the guarantee and the conditions of the "Service without worries" is available at www.evolve-europe.com

Your packet with the phone that you send to the service should include: the device packed against damage caused by transport (bubble wrap) - valid warranty card, event. the invoice containing IMEI of the device - the described defect - your contact (address, telephone number, email).

Problem	Cause	Solving
The phone can't be switched on	The key for switching on the phone wasn't pressed long enough.	Press the key for switching on for 3 seconds at least (or longer).
	The battery is low.	Recharge the battery.
	The SIM card has failed.	Check or replace the SIM card.
The recharging failure	The contact is faulty.	Check the contacts; change the cable or the charger.
	The charging voltage is too low.	At first, charge about half an hour, then disconnect the charger and again re-connect it and charge the battery completely.
	The wrong charger.	Use the right charger.
The phone call can't be made	The SIM card failure.	Check or change the SIM card.

	The dialling mistake.	Dial the number again.
	The credit is used up.	Contact the operator.
The partial call failure	You have the wrong number.	Check the phone number.
	The wrong setting.	Check the call blocking.
The SMS can't be sent	The service for your SIM card isn't activated or the SMS centre number isn't set up.	Contact the operator and get the SMS centre number.
The wrong PIN	You have entered the wrong PIN code three times.	Contact the operator.
The automatic locking failure	Entering the wrong code (forgetting the code).	Contact the authorized cell phones service.
The mobile phone keeps switching off itself	The battery is low.	Recharge the battery.
	The failure in settings.	Check if the function for automatic switching off isn't active.
	The coincidental failure.	Switch the phone on again.

The phone isn't ringing at the incoming call	The volume is lowered to the minimum.	Set the volume again.
--	---------------------------------------	-----------------------

ABACUS Electric s.r.o. reserves the right to revise this document or withdraw its validity anytime and without prior notice and is not responsible, if the device was used in a different way than it was recommended above.



DECLARATION OF CONFORMITY:

Hereby, the company ABACUS Electric s.r.o. declares that this model **EVOLVE Gladiator RG300** is in compliance with the requirements of the norms and regulations, relevant for the given type of device. The complete text of Declaration of conformity can be found at ftp.evolve-europe.com/ce

Copyright © 2012-2013 ABACUS Electric s.r.o.
All rights reserved. Design and specification can be changed without prior notice.