# MANUAL EVOLVEO

MODEL VERSION / DATE

EasyPhone ID III. / 30. 7. 2024



EN

# **Table of Contents**

| INTRODUCTION                                   | 3    |
|--|------|
| THE MOST UP-TO-DATE VERSION OF THE USER MANUAL | 4    |
| SAFETY WARNINGS AND INSTRUCTIONS               | 4    |
| IMPORTANT NOTICES                              | 8    |
| PACKAGING CONTENT                              | 9    |
| SPECIFICATIONS                                 | 9    |
| DESCRIPTION OF INDIVIDUAL PARTS                | .10  |
| PUTTING YOUR PHONE INTO SERVICE                | .11  |
| BASIC FUNCTIONS                                | .16  |
| SETTINGS                                       | .17  |
| MAINTENANCE INSTRUCTIONS                       | .18  |
| WARRANTY AND POST-WARRANTY SERVIC              | _    |
|  | . 18 |

# WELCOME TO THE EVOLVEO FAMILY OF PRODUCTS

- Before putting this product into operation, please read this entire user manual carefully through to the end, even if you are familiar with the use of a similar type of product in the past.
- Keep this user manual for future reference it is an integral part of the product and may contain important instructions on commissioning, operation and care of the product.
- Make sure that other people who will be using this appliance read this user manual.
- If you give, donate or sell this appliance to others, please give them this user manual together with this product and remind them to read it.
- During the warranty period, we recommend keeping the original packaging of the product - this will protect the appliance in the best possible way during transport.

# THE MOST UP-TO-DATE VERSION OF THE USER MANUAL

Due to the ongoing innovation of EVOLVEO products and changes in legislation, you can always find the most up-to-date version of this user manual on the website www.evolveo.cz or by simply scanning the QR code shown below with your mobile phone:



## SAFETY WARNINGS AND INSTRUCTIONS

- Place the mobile phone and its accessories out of the reach of children.
- Keep your mobile phone dry. Rain, moisture or water can damage the circuit board. If your mobile phone is accidentally dropped in water, remove the battery in time and send it to a local authorised repairer immediately.

- Do not place your mobile phone in places covered with dust or normal use will be impaired.
- The liquid crystal display is an easily vulnerable part of the mobile phone, avoid dropping it or shaking it violently; it is forbidden to touch the display with a sharp object.
- Do not place your mobile phone in a place where the temperature is too high. High temperatures will shorten the life of the electrical equipment, damage the battery, deform or melt its plastic cover.
- Please do not place the mobile phone in a place where the temperature is too low, otherwise moisture will come out of the mobile phone when the temperature rises to normal temperature, which will damage the circuit board of the mobile phone.
- Do not throw, knock or shake the mobile phone to avoid damaging its internal circuitry and precise design.
- Don't burn or treat mobile phone batteries as ordinary waste. To avoid potential risks to life and damage to the environment, follow the environmental guidelines set by your local

authorities and treat and recycle batteries in a timely manner.

- If a mobile phone, battery or other charging device is carelessly dropped into water, do not dry it in any heating device (e.g. dryer, microwave oven). The mobile phone or other products may malfunction and the mobile phone, battery or other charger may burn out.
- Dispose of the abandoned used battery according to the relevant provisions.
- Attention to the use of accessories
- Keep all accessories (e.g. SIM card, memory card, battery) out of the reach of children to avoid danger.
- Before removing the mobile phone battery, make sure the mobile phone is switched off and disconnect the connection between the mobile phone and the charger.
- Mobile phone accessories are not waterproof, keep all accessories dry.

- When disconnecting power from any accessory, remove the plug properly, do not pull the power cord.
- If the mobile phone, battery and charger do not work normally, contact the nearest qualified maintenance department.
- When you are not using your mobile phone, you'd better turn it off and remove the battery to save energy and eliminate mobile phone radiation.
- When using your mobile phone, do not set the volume too high or your hearing will be damaged.
- A non-expert must not remove the terminal and the mobile phone battery himself.
- Do not use a leather case with a magnetic button to avoid the magnet if possible, which may cause signal interference when turning the mobile phone on or off, and its hard iron button may damage the liquid crystal display; the plastic case may cause unsmooth evaporation of steam, erosion of components inside the mobile phone, and oxidation and discoloration of its cover.

#### IMPORTANT NOTICES

- Use a headset with a microphone to make calls while driving. Only pull your car over to the side of the road to make a phone call in an emergency.
- Switch your phone off when you board the aircraft and do not switch it on on board.
- Use extra caution when using the phone near pacemakers, hearing aids or other electronic medical devices that may interfere with the phone.
- Never attempt to disassemble the phone yourself. If you have problems with your phone, contact your dealer or service.
- Do not connect your phone to the charger unless the battery is inserted
- Protect your phone from magnetic fields. Keep her out of reach
- items with magnetic elements, such as credit cards.
- Protect your phone from liquids. If moisture penetrates or corrodes, immediately


### PACKAGING CONTENT

- Easyphone ID mobile phone
- User manual

# **SPECIFICATIONS**

- Display size: 1.77"
- RAM: 24 MB
- ROM: 32 MB
- · Charging port: USB-C
- Battery capacity: 700 mAh

# **DESCRIPTION OF INDIVIDUAL PARTS**

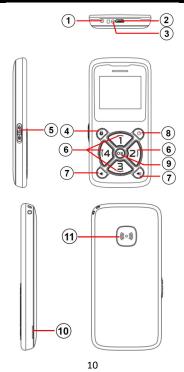

- 1) Flashlight
- 2) USB Type-C port
- 3) Pins for charging cradle
- 4) Unlock/Lock button
- 5) Flashlight button
- 6) Buttons 1-4 (Directional buttons)
- 7) Volume up and down buttons
- 8) On/Off button
- Confirmation button (OK) / Button to enter the Menu
- 10) Input for removing the back cover
- 11) SOS button

#### Remark:

Charging cradle is not available for this model (pins for charging cradle are for reference only)

## **PUTTING YOUR PHONE INTO SERVICE**

## SWITCHING YOUR PHONE ON/OFF

- Press and hold the On/Off button to turn on your phone. Your phone automatically searches for a network
- 2) When the phone is on, hold down the On/Off button to switch the phone off.

#### REMOVING AND INSTALLING THE BATTERY

The included Li-ion battery with the phone can be used out of the box. For the first three uses, fully

drain the power and fully recharge it so that the new battery works well.

## **BATTERY INSTALLATION**

- Insert the battery into the battery compartment, keeping in mind that the side of the battery with the pins should be inserted first.
- 2) Replace the back cover.

#### BATTERY REMOVAL

- 1) Remove the back cover.
- Place your finger on the side finger grip, then lift the battery out of the finger grip to remove it.

#### **CHARGING**

To charge this mobile phone model, use a power adapter with a USB-C (Type C) terminal with an output of at least 1A (the adapter is not included in the delivery).

#### INSERTING A SIM CARD AND SD CARD

- Turn off the phone and disconnect other external power.
- 2) Remove the back cover and remove the phone battery.
- Insert the SIM card into the SIM card slot in your phone.
- Insert the SD card into the SD card slot on your phone.

#### SIM CARD WITH PIN CODE

The EasyPhone ID mobile phone does not have a numeric keypad and so does not support SIM cards where a PIN is required.

For SIM cards that require a PIN, you must first insert the SIM card into another device and disable the PIN code on the SIM card.

## UNLOCK/LOCK BUTTON

In standby mode, briefly press the Unlock/Lock

button ( ) to lock the keys. Long press the

Unlock/Lock button ( to unlock the keys, once unlocked all keys work as normal.

## PHONE NUMBER SETTINGS FOR BUTTONS 1-4

To set up 4 numbers for phone users, confirm that your phone has a valid SIM card and make the following settings:

- Sending SMS with \*#CALL#1#number# for button 1
- Sending SMS with \*#CALL#2#number# for button 2
- •Sending SMS with **\*#CALL#3#number#** for button 3

 Sending SMS with \*#CALL#4#number# for button 4

When your phone receives this pre-prepared text message, a ring tone will sound. The user can briefly press the OK key (OK) to accept and any other key to reject.

These steps should be performed when the keys on the device are unlocked. Only one number can be confirmed at a time. Resending the SMS with the new number will overwrite the current number.

# SETTING UP A PHONE NUMBER NEIGHBOURHOOD

To set up SOS numbers for phone users, confirm that your phone has a valid SIM card and do the following:

- Send SMS with the command
   \*#SOS#1#number# to your phone to set the 1st SOS number
- Send an SMS with the command
   \*#SOS#2#number# to your phone to set the 2nd SOS number.

- Send SMS with the command\*#SOS#3#number# to your phone to set the 3rd SOS number
- •Send SMS with the command
  \*#SOS#4#number# to your phone to set the 4th
  SOS number
- Send SMS with the command\*#SOS#5#number# to your phone to set the 5thSOS number

When your phone receives this pre-prepared text message, a ring tone will sound. The user can briefly press the OK key (OK) to accept and any other key to reject.

These steps should be performed when the keys on the device are unlocked. Only one number can be confirmed at a time. Resending the SMS with the new number will overwrite the current number.

#### CALLING

When a call comes in, the keypad lights up with a ringing tone and vibration.

•Make the call: Press the number key for about 3 seconds to make a call

- •Accept the call: Press the Ok key  $(\mathbf{OK})$  or the Lock key  $(\mathbf{OK})$  briefly to answer the call.
- Reject/end the call: Press the On/Off button
   ) to reject or end the call
- Press the volume buttons to adjust the call volume

#### **BASIC FUNCTIONS**

Short press OK key (0K) to access the menu, left key (4) and right key (2) to scroll through the menu

#### CONTACTS

Users can view the 4 main contacts set by SMS (not editable).

#### RADIO FM

Press the OK key (**OK**) briefly to enter the FM radio function

- Press the up button (1) to switch to the last channel and the down button (2) to switch to the next channel
- Press the OK button (**OK**) to pause the FM radio function
- Volume adjustment is done by volume up and volume down buttons
- ullet Press the On/Off button ( ullet ) to exit the FM radio function

#### CALENDAR

In this menu, users can view the current date

#### **SETTINGS**

#### SOS FUNCTIONS

By long-pressing the SOS button on the back of the phone, the user activates the SOS function, after which a preset SMS message is sent to all stored contacts in the SOS numbers.

#### 1) Status

Users can enable/disable the SOS function.

## 2) SOS numbers

Users can view 5 family numbers or emergency numbers set by SMS (cannot edit contact name)

## 3) SOS SMS

Users can view a preset SMS message (not editable)

# 4) Siren

Users can enable/disable the siren function on the device

# PHONE

In this menu, users can set the language of the phone.

#### **MAINTENANCE INSTRUCTIONS**

Clean with a soft, lint-free cloth. Do not use detergents or solvents to clean the equipment.

# WARRANTY AND POST-WARRANTY SERVICE

Repairs and servicing can only be carried out at an authorized service point for EVOLVEO products (more at www.evolveo.com), otherwise you may damage your mobile phone and lose your warranty.



Symbol on the product, in the accompanying documentation or on the packaging means that in EU countries, all electrical and electronic equipment, batteries and accumulators must be disposed of separately at the end of their useful life as separated waste. Do not dispose of these products in unsorted municipal waste.



## **DECLARATION OF CONFORMITY**

The company Abacus Electric, s.r.o. hereby declares that the EVOLVEO EasyPhone ID phone meets the requirements of the standards and regulations that are relevant for this type of device.

The full text of the Declaration of Conformity can be found at http://ftp.evolveo.com/ce/

Importer / Manufacturer **Abacus Electric, s.r.o.** Planá 2, 370 01, Czech Republic

Made in China

Copyright © Abacus Electric, s.r.o. www.evolveo.com www.facebook.com/EvolveoCZ

All rights reserved. The appearance and technical specifications of the product are subject to change without notice.