


1. Launch Niagara (SPTI) – Device Rescan - Format

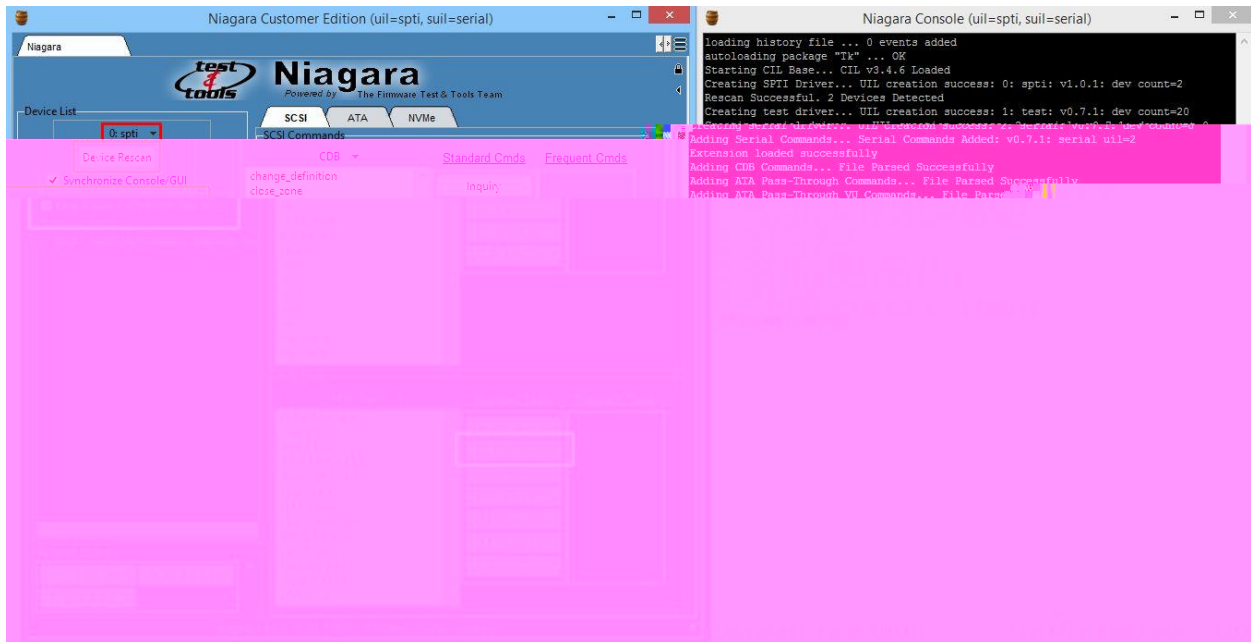

2. Display Device Format Settings shows current number of LBAs
3. Enter number of blocks in decimal 585937500 or 0x22ECB25C
4. Choose Fast Format - Format

