

1. The phone size

the Smartphone must not exceed 163 mm x 83 mm





2. There are three rubber pads.

Place the rubber pads onto the frame in accordance with the position of the buttons of your Smartphone as it is shown below.


EVA foam pad

Side buttons of the phone

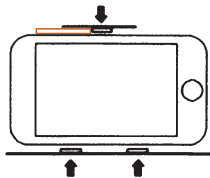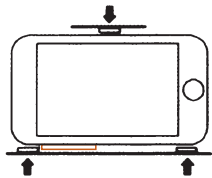

3. To avoid injury,

do not use your Smartphone while charging.

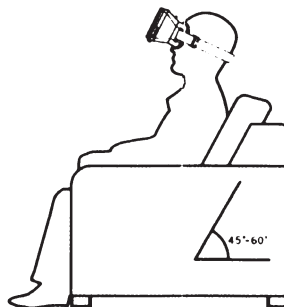

Focal length 70 mm 75 042 FOV-70 •
65-75 mm adjustable range
58-72 mm inter-pupillary distance

EVOLVEO

VRC-4

Virtual reality glasses



User's manual

User's manual

- A) Install the application.
- B) Installation of the device.
- C) Setting before use.

CAUTION!

This device is not a toy. Keep the device out of reach of children under 12 years. Prolonged use may cause fatigue. Use the device in moderation. The device may cause epileptic seizures especially to people who are sensitive to light. Make sure that your Smartphone is properly inserted into the device. Use the 3D glasses in a safe place. Since the user may lose balance, it is necessary to ensure a safe and secure environment for the user prior to putting on the 3D glasses. Do not use it while driving. Do not use it during sport activities. Do not expose it to high temperatures. Do not expose it to the direct sunlight.

INSTALLATION OF THE DEVICE

Remove the inner frame by pulling its edge.
Place your Smartphone inside the device.



Hold the clamp and align the center with the central axis of the screen.

Insert the frame into the 3D glasses.



SETTING BEFORE USE

1. For best performance adjust the inter-pupillary distance so your eyes are parallel with the center of the glass.
2. Set the focal length to achieve the best performance of the device.



3. The front panel can be slid out. Slide the front panel out in order to use the camera of your Smartphone.

